

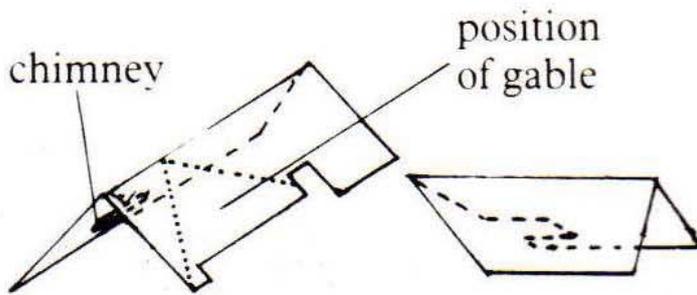


# ASSEMBLY INSTRUCTIONS

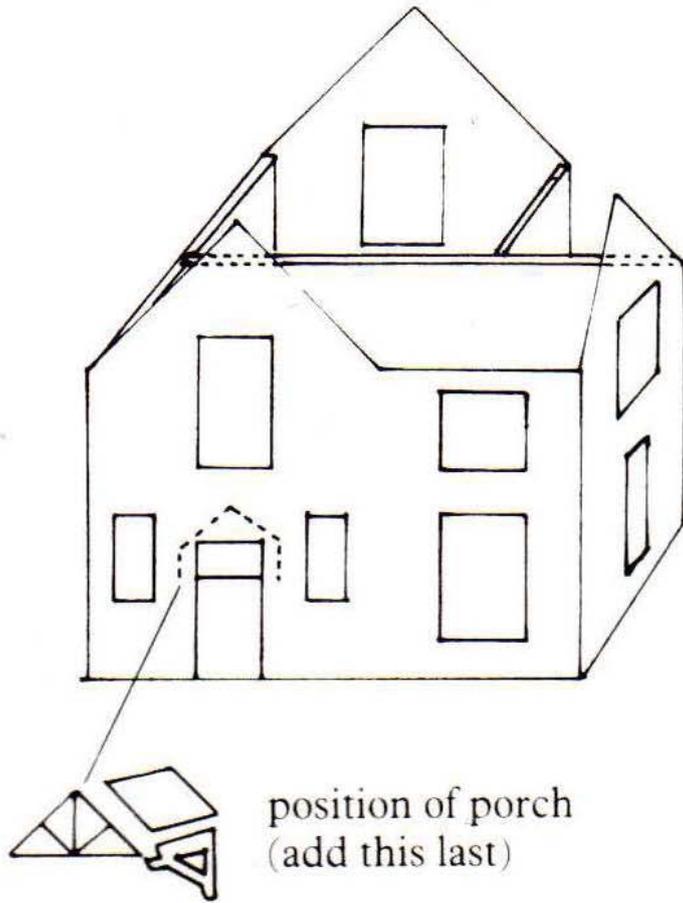

When roof is in position, glue barge boards under the overhang.

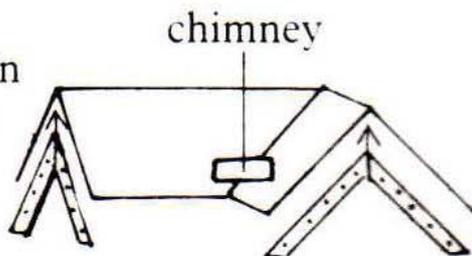

Glue chimney halves together and trim tops to square the pots. Each chimney should line up with, and glue to the supporting wall.

All normal polystyrene cements are suitable for assembling this kit.

MADE IN THE UK