



ASSEMBLY INSTRUCTIONS


1. Glue windows into appropriate spaces. Due to unequal shrinkage the sides of the windows need some slight easing with a file before they will fit in to the brick base.
2. Because the mitred corners could slip, attach the brick walls first to the underside of the platform (using the lugs as a guide) before glueing them to each other.
3. Assemble the timber section, making sure that the short walls are inside the long walls. Attach to the top of the platform.

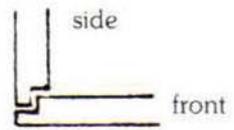

4. Add the roof. You may find it easier to line up and glue one piece first, then drop the second piece in to the gap.
5. Assemble the W.C. When it is dry, add the steps so that the top edge of the steps is in line with the front of the W.C. (There are two tiny bits of flash to be removed from the steps - these are at the top of the steps). Attach the hand rails along either side of the steps.

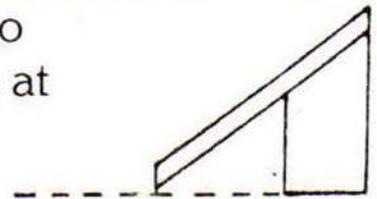

6. Now add the railings to the platform.

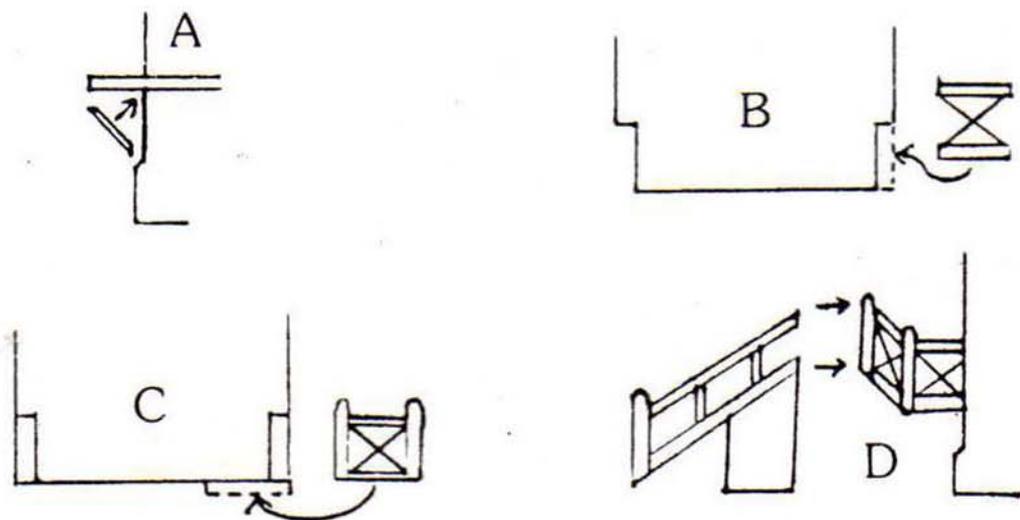

All normal polystyrene cements are suitable for assembling this kit.

MADE IN THE UK